



FIRST NEED®
TRAV-L-PURE®
 Portable Drinking Water Purification System

**PURIFICATION CANISTER
 REPLACEMENT INSTRUCTIONS**


1. Remove Lid. (fig. 1)




2. Completely loosen Knurled Nut below Pump Handle. Pull Pump Handle straight up to remove Shaft and Piston. (fig. 2)

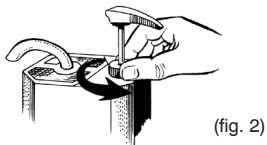


3. Grasp Spout and pull straight up, removing the Cover Plate and Canister from the Housing. (fig. 3)

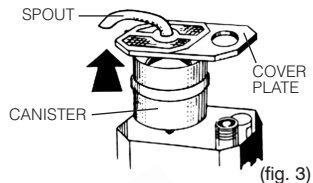

4. Remove the used Purification Canister from the Cover Plate by carefully sliding the Canister Spout through the Grommet in the Cover Plate (dispose of used Canister properly). (fig. 4)

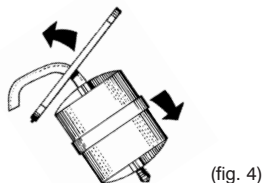


5. Remove the Spout Cap from the new Canister. Lubricate the Grommet in the Cover Plate with a small amount of petroleum jelly or water. Install the new Canister by pushing the Spout through the Grommet in the Cover Plate.

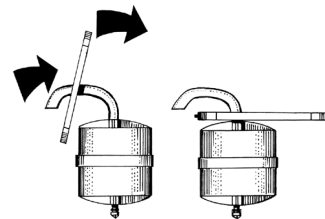


Slide the Cover Plate along the Spout until the bottom of the Cover Plate contacts the top of the Canister. (fig. 5)

6. Reinstall the Canister by grasping the Spout and seating the new Canister assembly into the Trav-L-Pure Housing. The Cover Plate has a tab that fits into a slot in the Housing and is supported on the opposite side by two extensions on the Housing wall. (fig. 6)

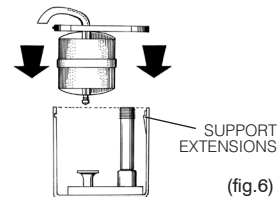

7. Reinstall the Pump Piston into the Barrel. Compress Piston seal edges to fit into the Pump Barrel. (fig. 7)

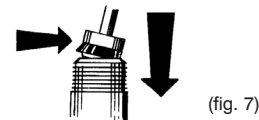

8. Thread the Knurled Nut onto the Pump Barrel to hold the assembly in place. Do not overtighten. (fig. 8)



General Ecology, Inc.

the pure science of safe water™



151 Sheree Blvd., Exton, Pennsylvania 19341 USA

(610) 363-7900 • fax (610) 363-0412 • <http://www.generalecology.com>

342044